



Right Mfg. Systems Inc.
124 South 1800 West
Lindon, UT 84042
800-600-5669
801-796-8316 fax
www.rightmfgsys.com

7SL Quick Reference Guide

All steps must be followed before loading:

1. Trailer must be level. To do this Extend all jacks **firmly** on ground.
2. Lift load cell bolts.
3. Remove Transportation Bolts.
4. Remove spacers from transportation bolts.
5. Lower all weight on to load cells.
6. Bin must be free of all obstructions for Load cells to work correctly.
7. Max blow in pressure is **5-8 psi**.
8. Start motor.
9. Open gate.
10. Use Start/Stop switch to operate discharge auger. (Located in box in back of machine.)
11. To Transport reverse steps 5-1. (Weight must not be on load cells for transportation of Silo. The load cells will be damaged with minimal weight.) **Absolutely no residual cement in bin.**
12. Auger tends to be noisy until product is in the auger. Cement product will always center the auger. When the auger is empty it will make noise.